 


MD-2018RVibration Sensor manual

1.Appearance



2.Features

MD-2018R vibration sensor has nice appearance, simple operation, easy to installed and strong applicability, can send out alarm signal accurately, as well as monitor violent acts effectively. Pulse counting can be adjustment.

3.Specifications

Model: MD-2018R

Working Environment: -5℃ ~50℃

Signal: 150m (in open area)

Working voltage : 3V

Alarm: vibration

Working current: $\leq 10 \mu A$

4.Installation

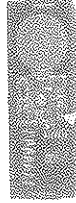


Fig 1

Front cover Fig 2

- ① Open the front cover by ② Attach the base to the wall ③ Replace the cover pressing the tap as arrow.

5.Dip switch



dip switch

Sensibility adjustment

level 1--Maximum sensibility SW-2 off SW-1 off
(DEFAULTS)

level 2--level 2 SW-2 on SW-1 off

level 3--level 3 SW-2 off SW-1 on

level 4--minimum sensibility SW-2 on SW-1 on

